

# REO PEGS

“ NZ PAT APP 333028 ”

## FOUNDATIONS MADE EASY


FOR TWO VERTICAL BAR CAGE OR  
TRENCHMESH

DRIVE REO PEGS TO HEIGHT IN FOOTING  
PRIOR TO PLACING STEEL.

PLACE REO PEGS AT 1000 CRS MAX, IN  
CENTRE OF FOOTING WITH LUGS FACING  
TOWARDS DIRECTION OF CONC POUR  
CLIP REINFORCING STEEL INTO LUGS  
POUR WITH CONCRETE

FOR TWO HORIZONTAL BAR OR FOUR  
BAR CAGE

PLACE CAGE IN FOOTING FIRST  
DRIVE REO PEGS IN TO HEIGHT BESIDE  
CAGE AT 1000 CRS MAX AND LIFT EITHER  
BARS OR STRIPS INTO APPROPRIATE LUGS

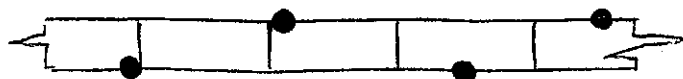

CAPILLARY BREAK

DO NOT DRIVE PAST THIS POINT

